

OSA 223RKTV

Reverse Cycle R410A Split System Outdoor Unit

Installation & Maintenance

GENERAL

This OSA 223RKTV Outdoor Unit must be installed in accordance with all national and local safety codes.

Options

1. Anti-vibration mounts (rubber)
2. Drain connection adaptors - right angle.

INSTALLATION

Positioning

Refer to dimension diagram below for minimum clearances.

Fasten the unit down to a firm flat horizontal base using the four holes provided in the mounting rails. To avoid transfer of vibration, mount the unit on the optional rubber mounts available from **temperzone**.

When the unit is being installed on a roof it is recommended that the unit is installed on a substantial structure with vibration isolating springs or rubber mounts (optional extra) beneath the unit. These items are not supplied with the unit.

Drain

Install the unit with a positive fall to the rear to ensure condensate and/or rain water drains away freely through the drain holes provided. Drain connection adaptors (25/13) are available as an optional extra.

REFRIGERATION PIPING

General

The OSA 223 is shipped with a refrigerant charge sufficient for a 10 m line length. The matched indoor unit is shipped with a holding charge of nitrogen. OSA 223 units have one flare and one rotolock assembly. Two loose pipe extensions are supplied to enable a choice of exit – side or rear; both require brazing.

Recommended Pipe Sizes

Suction pipe : 22 mm OD
Liquid pipe : 13 mm OD

Line Lengths

Maximum extended line length is 50 m. Refer also to *Oil Charge* overleaf.

Height Separation Limits

Outdoor Unit above Indoor Unit : 18 m
Outdoor Unit below Indoor Unit : 18 m

Vertical Risers

If the outdoor unit is to be installed above the indoor unit, then the suction riser should be trapped at the bottom of the vertical rise and then again at 8 m (maximum) intervals. This is to ensure oil return to the compressor. The trap to be a 'swan neck' curve in the pipe, with no change in the pipe size.

Piping

1. Use clean sealed refrigeration grade piping and accessories designed specifically for R410A.
2. Cut pipe with a pipe cutter ONLY.
3. Use long radius bends (2x pipe dia.).
4. Insulate the suction (gas) line and seal all insulation joints.
5. Filter dryers are not required or recommended, however extreme care must be taken to keep the piping system dry.
6. Include a process point in the interconnecting pipework.
7. Ensure open pipe ends are sealed until the final connection is made.
8. **Caution:** To avoid damage to teflon seals, braze suction pipework to stub connection (supplied loose) **before** connecting to unit's valve.
9. Remove valve's dust cap and lubricate teflon seal with refrigeration oil prior to final assembly and connection.

Charging

The unit is supplied with 4.6 kg of refrigerant HFC-410A (R410A) which is sufficient for 10 m of pipework when connected to indoor units ISD 223K. Add, or subtract, 55 g of HFC-410A per metre to suit the installed line length.

Procedure:

 
1. Evacuate Indoor Unit and interconnecting pipework to a pressure of 500 microns and hold for 15 mins.
2. Add refrigerant, if needed, via the Schraeder connection on the rotolock and flare pipe assemblies.
3. Open the service valve at the Outdoor Unit to allow refrigerant to flow throughout the system.
4. Leak check all brazed and fitted joints.

IMPORTANT :

Step 8 of the 'Start Up Procedure' requires you to check that the superheat on the suction line (where it enters the Outdoor Unit) is between 3°C – 5°C on cooling cycle with an indoor air temperature in the range 21° – 27°C and outdoor air temperature in



Dimensions (mm)

OSA 223RKTV



Not to Scale

Net Weight 152 kg

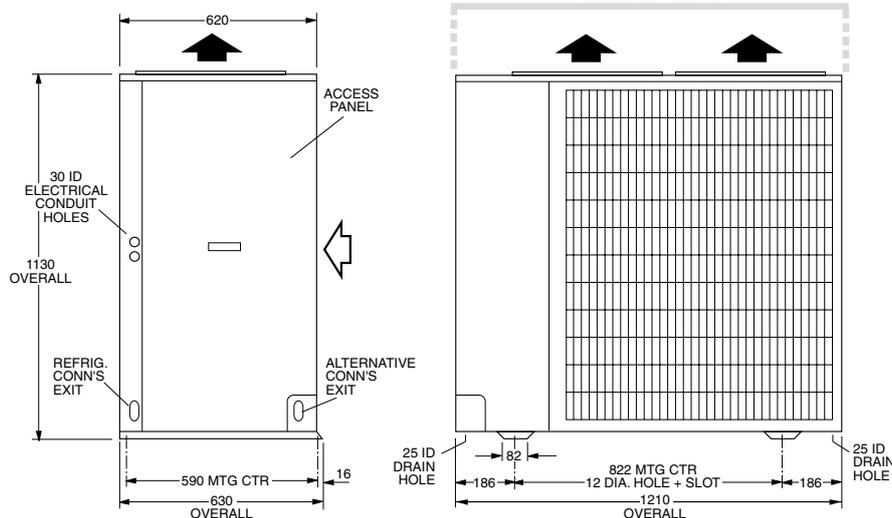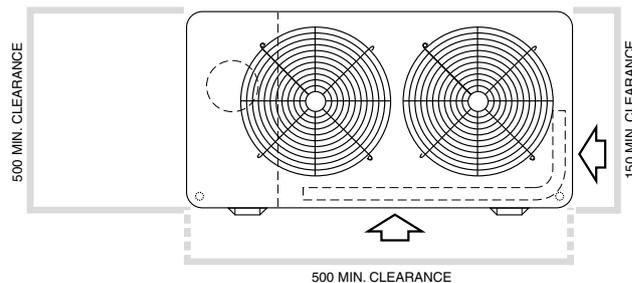

the range 24° – 35°C. If the conditions of the day do not allow this, use the heating cycle (on a reverse cycle unit) or other heat source to raise the indoor air temperature to about 24°C and blank off the outdoor coil to raise the head pressure to 400 psig (2760 kPag). Alter charge up or down to establish correct superheat.

WARNING:

This unit is designed for use ONLY with the refrigerant HFC-410A. The use of other refrigerants is NOT authorised or approved by the manufacturer and may cause operational problems such as poor performance and efficiency, loss of capacity, degradation of materials and refrigerant leaks. **The use of flammable or explosive materials as a refrigerant creates the additional risks of fire and explosion which may result in property damage, personal injury or death.**

Oil Charge

For line lengths in excess of 40 m, Emkarate RL22CF polyolester oil (or similar) should be added to the refrigerant at the rate of 13 ml/m of suction piping. **Note:** Do not use mineral oil.

ELECTRICAL REQUIREMENTS

Electrical work must be done by a qualified electrician. The outdoor unit must be wired directly from a distribution board by means of a circuit breaker or H.R.C. fuse, and a mains isolator provided - preferably close to the Outdoor Unit.

Note: DO NOT USE REWIRABLE FUSES.

Standard units are suitable for use with thermostats with either manual Heat/Cool selection or automatic changeover subject to the contact ratings of the thermostats.

Refer to **temperzone** for recommended thermostats.

It is recommended electricians run a spare wire between Outdoor Unit and Indoor Unit in case 'Indoor Fan Off During De-ice' becomes a requirement. Leave this spare wire unconnected until required. (Not required when using **temperzone** SAT-1 Controller). Refer indoor unit's wiring diagram.

A 24 hour power supply to the crankcase heaters is required, otherwise the warranty is void.

SYSTEM CHECK TESTS

1. Leave the remote switch in the off position and close the mains isolating switch.
A four hour delay period is required to allow the crankcase heater to drive any liquid refrigerant out of the compressor oil.

2. Check that all fan motors are free running.
3. Check for correct rotation of the compressor. If rotation is incorrect the compressor will not pump and will draw minimal current. To correct motor rotation, change the phasing at the main power terminal.
4. Check that the thermostat is correctly wired to the unit and is set at the desired temperature.
5. Check that the air filters, if any, have been correctly installed.
6. Check any supply air diffuser dampers are open.

START UP PROCEDURE

Use the supplied Commissioning Sheet to help you complete the following procedure:

1. Switch on the unit after the four hour delay period for the crankcase heater has expired.
2. Check the supply voltage.
3. Measure the current draw on the compressor motor and on each fan motor. Check all readings against the specified values - particularly the indoor fan amps if the unit is installed in a free blow application.
4. Fit gauges and measure the suction and discharge pressures.
Important: Gauges must be designed specifically for use with R410A.
5. Test the operation of the high pressure safety control by switching off the outdoor unit's fan.
6. Test the operation of the reversing valve by running the unit in both the heating and cooling mode.
7. Check that the air flow over the outdoor unit's coil is adequate and that the fan is running smoothly.
8. Check the superheat - refer charging procedure.
9. Check the supply air flow at each outlet.
10. Touch up any outdoor unit paintwork damage to prevent corrosion.

OUTDOOR UNIT CONTROLLER (OUC)

The Outdoor Unit Controller (OUC) includes a temperature sensing head pressure control which enables the system to run efficiently on cooling cycle at outdoor ambient temperatures below 20°C, and heating cycle above 15°C. The OUC also has features which protect against icing or overheating of coils, rapid cycling of the compressor and loss of refrigerant charge.

If the outdoor unit fans take some time to begin rotating when the system is powered on, or they don't appear to be rotating appropriately while the compressor is running, consult the OUC label on the electrical box. If necessary, refer to **temperzone** for further diagnostic information.

MAINTENANCE

Weekly For First Four Weeks

1. Check indoor unit air filters (if fitted) and vacuum or wash clean as necessary.
2. Check condensate drain for free drainage.
3. Check compressor compartment for oil stains indicating refrigerant leaks.
4. Check tightness of electrical connections.

Six Monthly

1. Check the tightness of all fan and motor mountings.
2. Check tightness of electrical connections.
3. Check that fan motors are free running.
4. Check suction and discharge operating pressures.
5. Replace indoor unit air filters (if fitted).
6. Check condensate drain for free drainage.

Yearly

1. Check all refrigerant piping for chafing and vibration.
2. Check the operation of electric heaters if fitted.
3. Check air supply at all diffusers.
4. Check for excessive noise and vibration and correct as necessary.
5. Check for insulation and duct damage and repair as necessary.
6. Remove lint and dust accumulation from outdoor coil fins.
7. Touch up all outdoor unit paintwork damage to prevent corrosion.

NOTE

The manufacturer reserves the right to change specifications at any time without notice or obligation. Certified dimensions available on request.

This pamphlet replaces the previous issue no. 2848 dated 02/08. Wiring revision C & D.

Pipe Length Capacity Loss

On Cooling Cycle Due to Pressure Drop

Note : Loss percentages are approximations only, due to piping variations. No allowance made for vertical piping.

Pipe Size (mm)		Equivalent Line Pipe Length (m)					Additional Pipe Length to allow per Bend	
Liquid	Suction	5	10	15	20	30	Suction Pipe Size OD	22 mm
13	22	0.7 %	2.1 %	3.4 %	4.7 %	6.1 %	Long 90° Radius (2 x pipe dia.)	0.5 m


OUTDOOR UNIT :- OSA 223RKTV	ISD 223K
WITH INDOOR UNIT	
CAPACITIES - NET to AS/NZS 3823	
COOLING -	KW 22.53
HEATING - REVERSE CYCLE	KW 21.6
ELECTRICAL INPUT @ 3PH 400V ~ 50Hz	
COOLING -	KW 7.223
HEATING - REVERSE CYCLE	KW 6.223
E.E.R. (COOLING)	KW/KW 3.119
ELECTRICAL	
SUPPLY REQUIRED 3PH 342-436V ~ 50Hz INCLUDING VOLTAGE FLUCTUATION LIMITS	
COMPRESSOR (3PH) RUN AMPS RATED CONDITIONS	A 11A/Phase
INDOOR FAN MOTOR (1PH) FULL LOAD AMPS	A 7.0
INDOOR FAN MOTOR CAPACITOR	MFD 18
OUTDOOR FAN MOTOR (1PH) FULL LOAD AMPS	A 0.83 x 2
OUTDOOR FAN MOTOR CAPACITOR	MFD 5 & 6
RUNNING AMPS (TOTAL)	A 11/11/17
RECOMMENDED EXTERNAL FUSE SIZE	A 25

WEIGHT - NETT OSA 223RKTV 152Kg
 REFRIGERANT - R410A
 UNIT PRECHARGED (10 METRE LINE LENGTH) 4.6 Kg
 BASE CHARGE UNIT 4.05 Kg PLUS 55 grams PER METRE LINE LENGTH
 BASED ON Ø12.7 OD LIQUID LINE & Ø22 OD GAS LINE
 COMPRESSOR TYPE : SCROLL
 OIL TYPE : POLYOLESTER (P.O.E.)
 ADD ADDITIONAL OIL 13 ml PER METRE OVER 40 METRE LINE LENGTH

ABB DESCRIPTION	
CAP CAPACITOR	
CB CIRCUIT BREAKER	
CCH CRANK CASE HEATER	
CM COMPRESSOR MOTOR	
CMC COMPRESSOR CONTACTOR	
HP HI PRESSURE CONTROL	
LP LOW PRESSURE CONTROL	
OUC OUTDOOR UNIT CONTROLLER	
OFM OUTDOOR FAN MOTOR	
RV REVERSING VALVE	

Consult Outdoor Unit Controller label for further details on refer to Temperzone for fault diagnosis information.
 Sensor Locations:
 Red to service valve pipe pocket.
 Yellow to coil return bend pocket.
 Blue to bottom of coil in fins.
 CHECK WIRING BEFORE SWITCHING ON, INCORRECT CONNECTION WILL DAMAGE MOTORS
 CLIENT WIRING _____
 Interconnections between units by client. Double insulated multi-core cable.

DO NOT PUMP DOWN SYSTEM WITH THIS COMPRESSOR

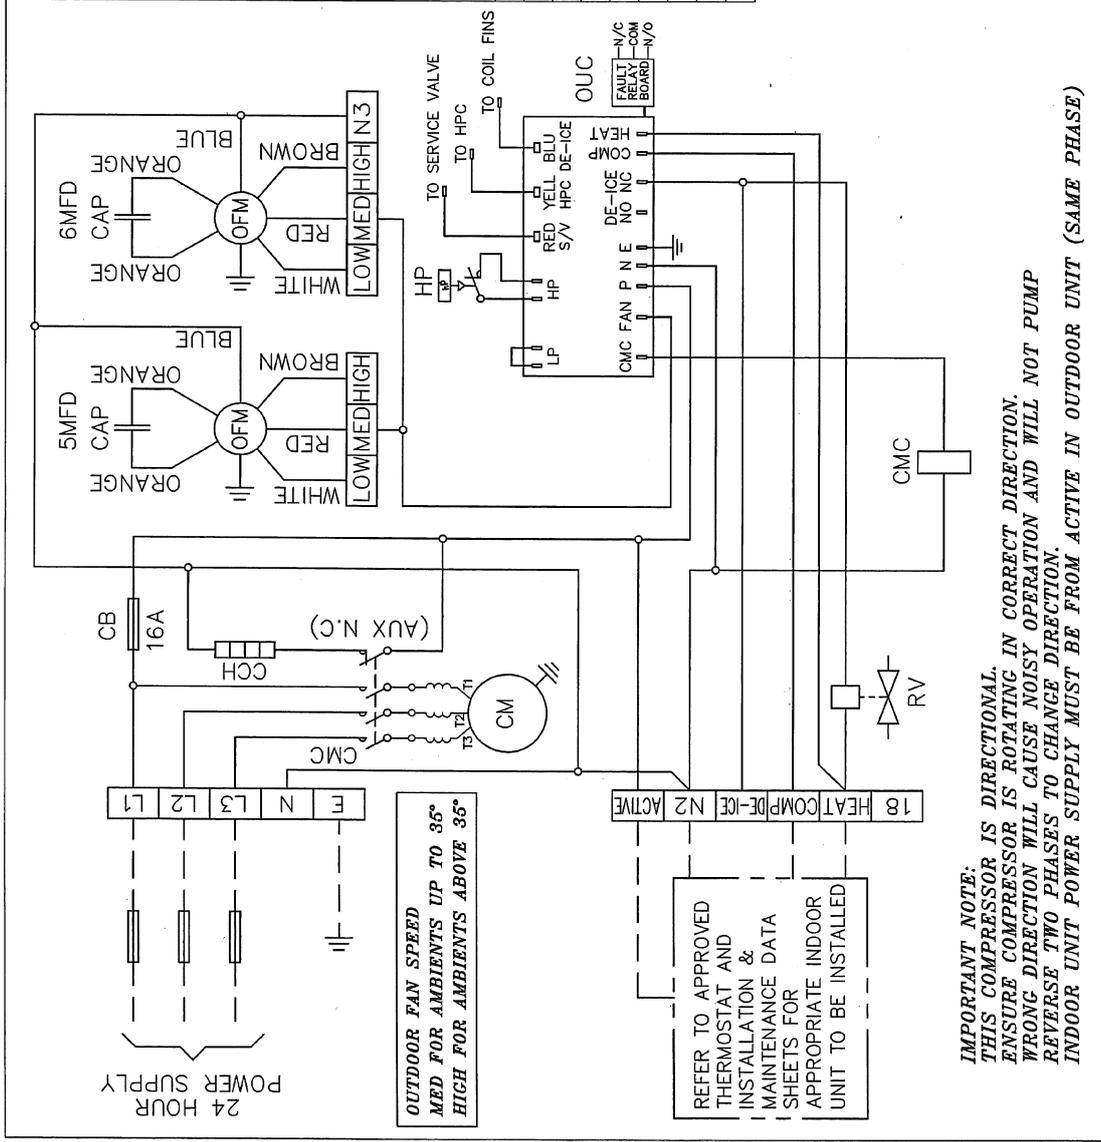

Programmed by	
PLOTTED	
09-06-09	
©temperzone ltd	
2003	
ASSY No.	
FINISH	
Mat.I	
DESCRIPTION	
No.	
DRG SIZE	
ECN	
DATE	
APRVD	
MODIFICATION	
ISSUE	

D	40 METRES WAS 10 METRES	N222809-06-08	ROD
C	WIRING CORRECTED, FAULT RELAY BOARD FITTED, CM DETAIL UPDATED, L/P OPTION REMOVED	N22115-05-08	D.A.B.
B	WEIGHT NOW 152Kg, WAS 148Kg	N167504-01-08	D.A.B.
A	CAPACITORS CHANGED TO 5 & 6 MFD	N170220-12-07	SDH

IMPORTANT NOTE:
 THIS COMPRESSOR IS DIRECTIONAL.
 ENSURE COMPRESSOR IS ROTATING IN CORRECT DIRECTION.
 WRONG DIRECTION WILL CAUSE NOISY OPERATION AND WILL NOT PUMP
 REVERSE TWO PHASES TO CHANGE DIRECTION.
 INDOOR UNIT POWER SUPPLY MUST BE FROM ACTIVE IN OUTDOOR UNIT (SAME PHASE)

REFER TO APPROVED THERMOSTAT AND INSTALLATION & MAINTENANCE DATA SHEETS FOR APPROPRIATE INDOOR UNIT TO BE INSTALLED

DO NOT PUMP DOWN SYSTEM WITH THIS COMPRESSOR

OSA 223RKTV WIRING SCHEMATIC

Drawn KTT	Date 21-02-06	Drawing No. 526-454-002	Revision D
Scale	Aprvd		

