


# HWP 78 – 235

## Filter Box

## Installation & Maintenance

### Dimensions (mm)

Model	L	H	D
HWP 78, 95, 120	765	283	135
HWP 140, 175	1065	283	135
HWP 210, 235	1185	350	135

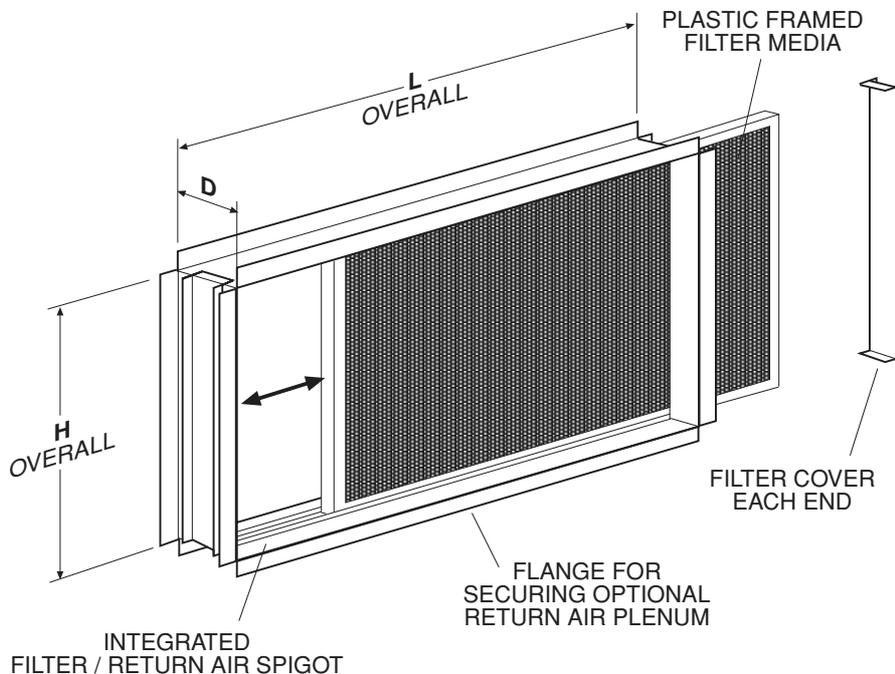

### GENERAL

The optional Filter Box has been designed to conveniently fit the following **temperzone** units:

Model	Filter Box
HWP 78, 95, 120:	Item No. 325 231 005
HWP 140, 175:	Item No. 325 311 005
HWP 210, 235:	Item No. 325 351 005

The filter media is washable and rated EU2 under DIN 24185.

Once installed filters may be accessed from either side of the filter box simply by removing one of the filter covers and sliding the frame out.

Note: The HWP 210 and 235 filter boxes have two half length filter frames.

### COMPONENTS

Check that the following items are supplied and are in good order:

1. Filter / Return Air Spigot.
2. Filter Media - mounted in plastic frame.
3. Installation Instructions.

### INSTALLATION

1. Unscrew the HWP unit's existing return air spigot, and place the removed screws to one side.
2. Mount the filter box in the same position as the return air spigot using the same screws removed above.

### MAINTENANCE

Dirty filters will reduce the performance of the air conditioning system. For optimum system efficiency the filters should be cleaned monthly by vacuuming.

This pamphlet replaces the previous issue no. 1942 dated 01/01.  
Flange added for R/A plenum.

### Note

Materials and specifications subject to change without notice due to the manufacturer's ongoing research and development programme.